

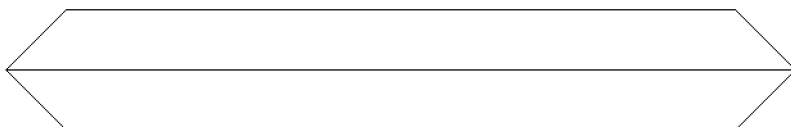
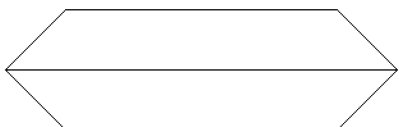
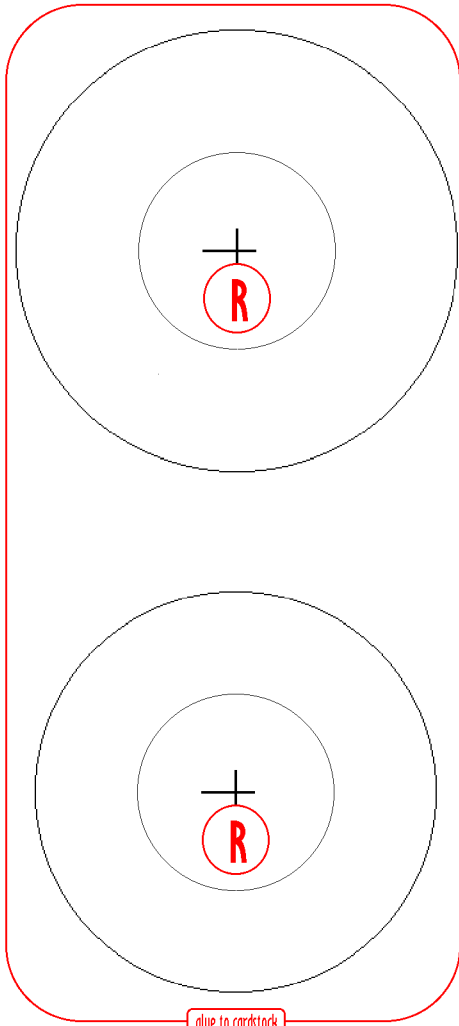


glue to cardstock



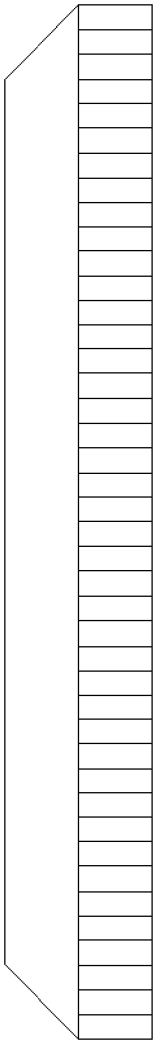





glue to cardstock

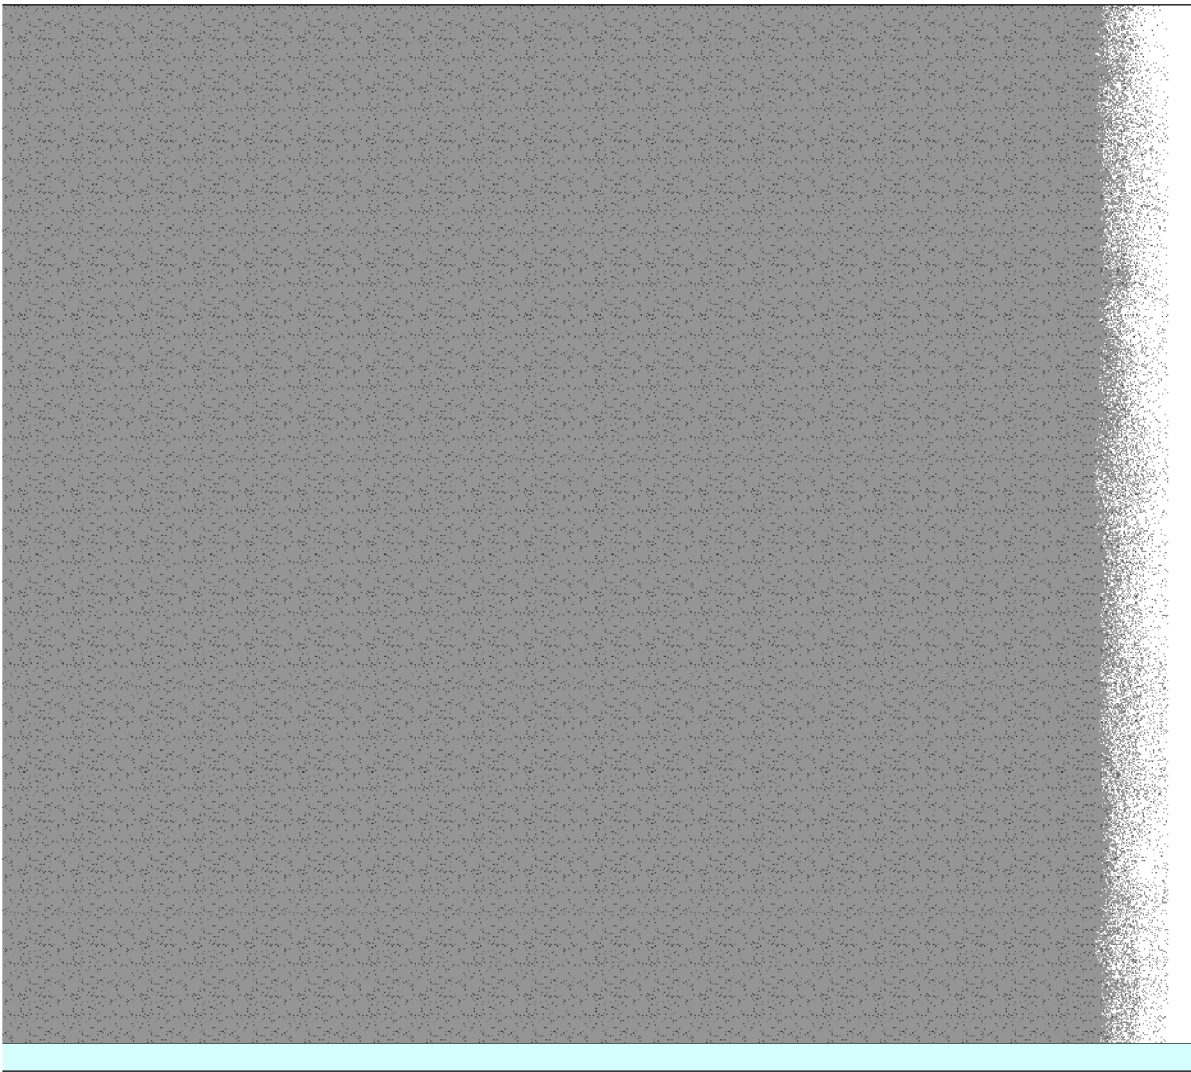

glue to cardstock


glue to cardstock

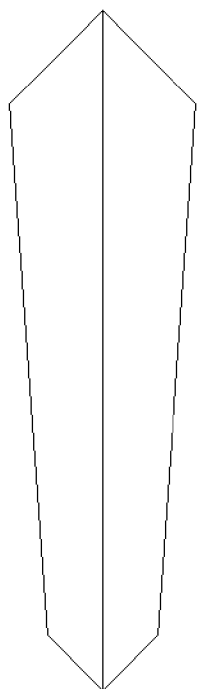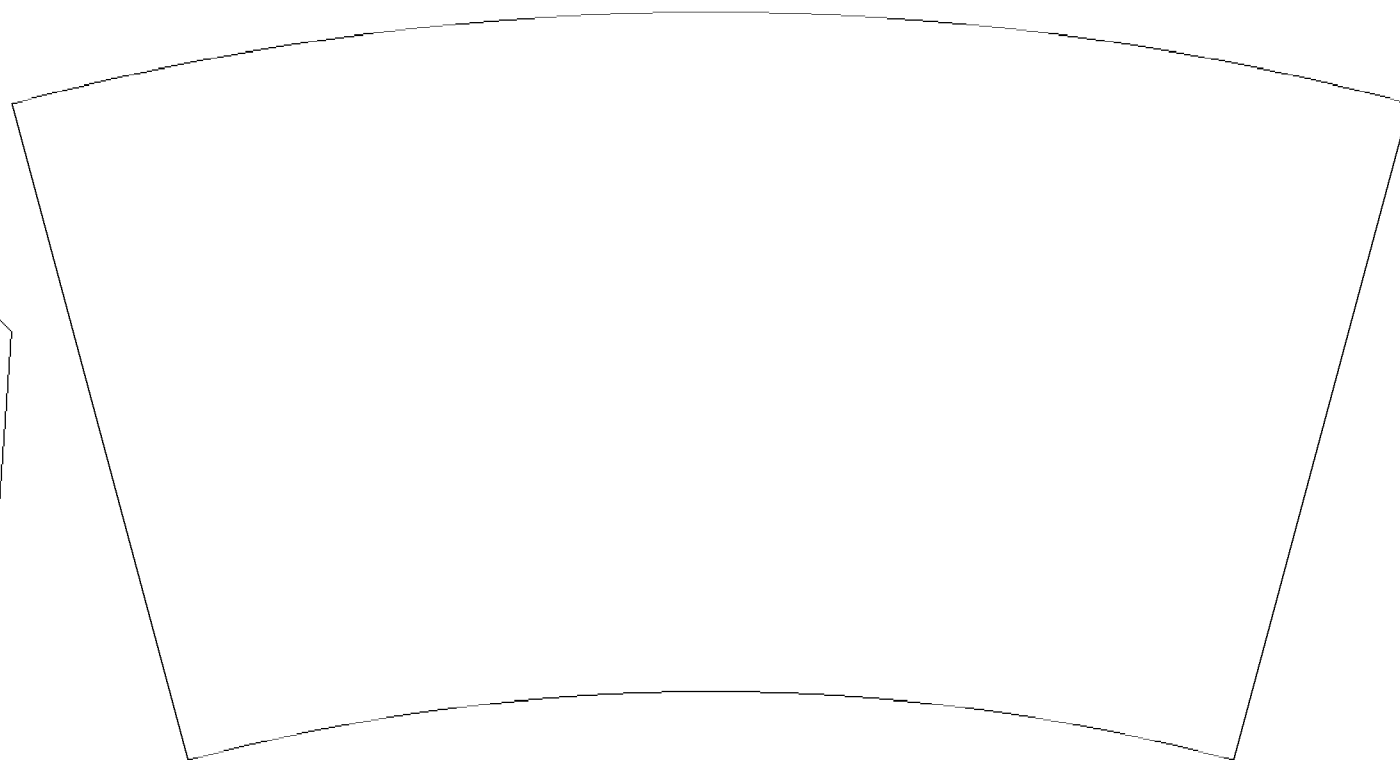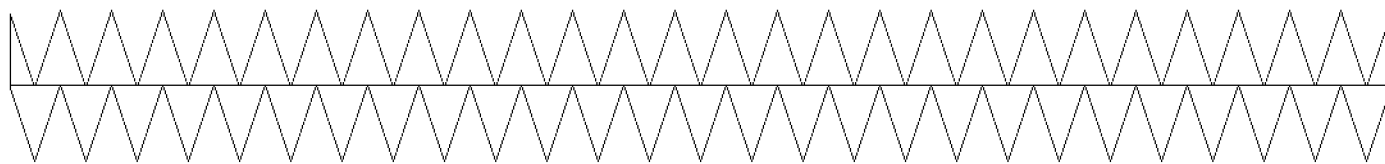

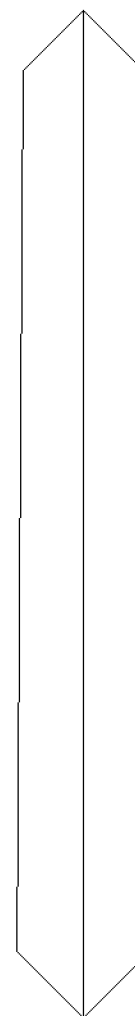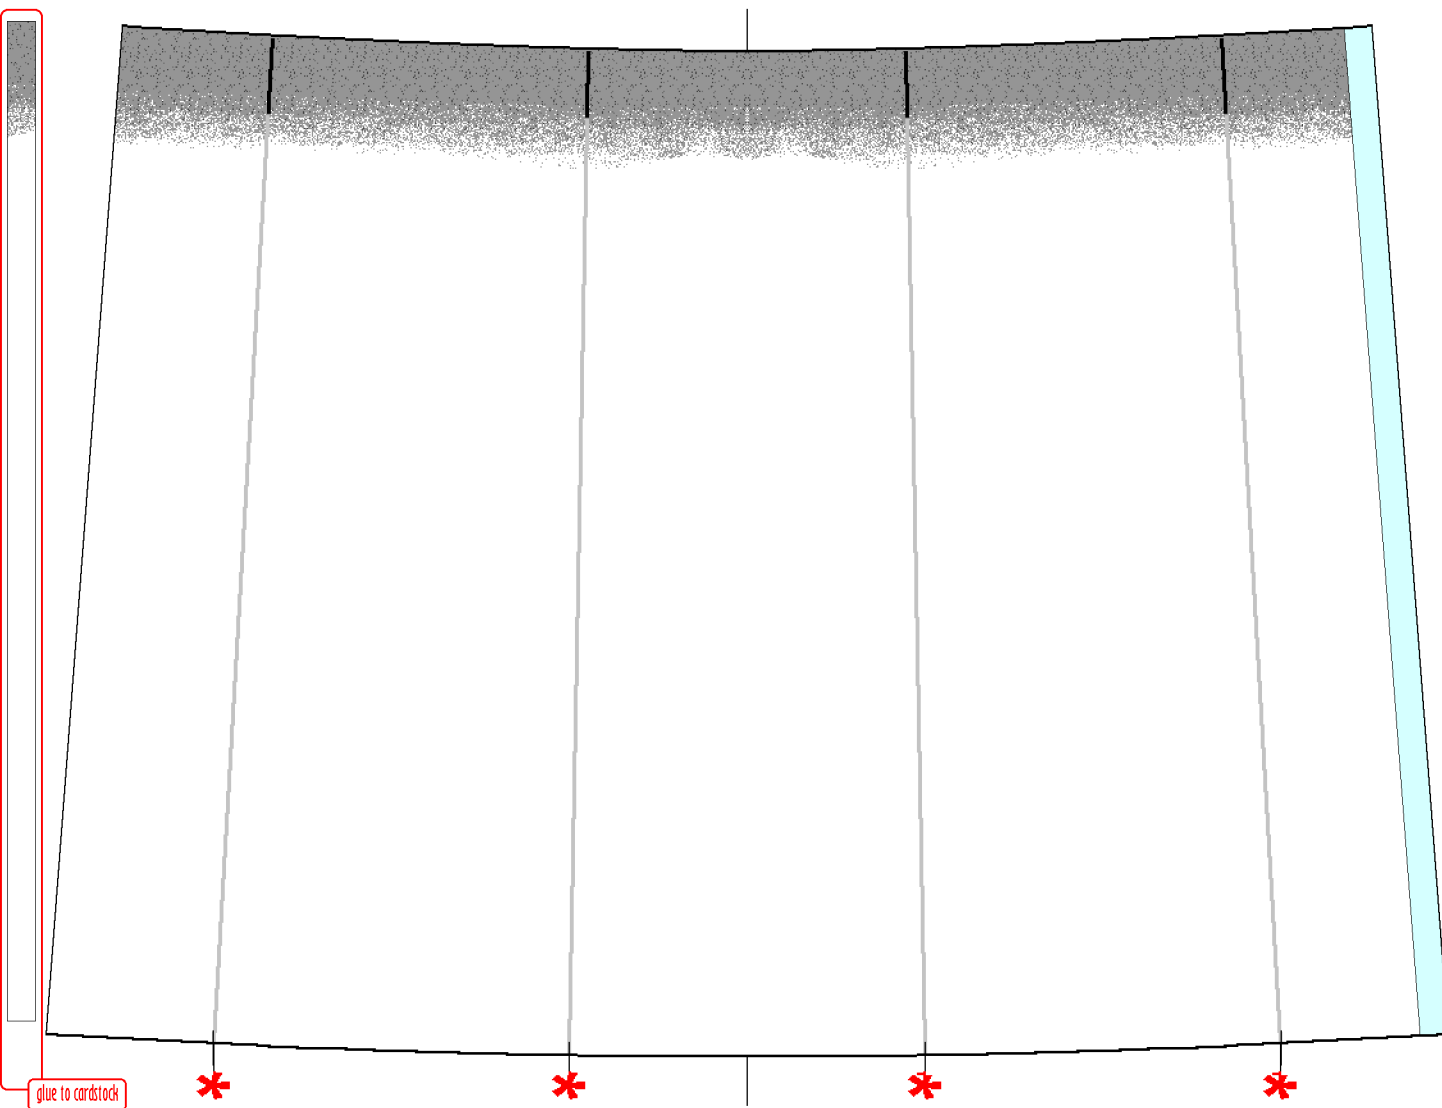

1 cm


1 inch

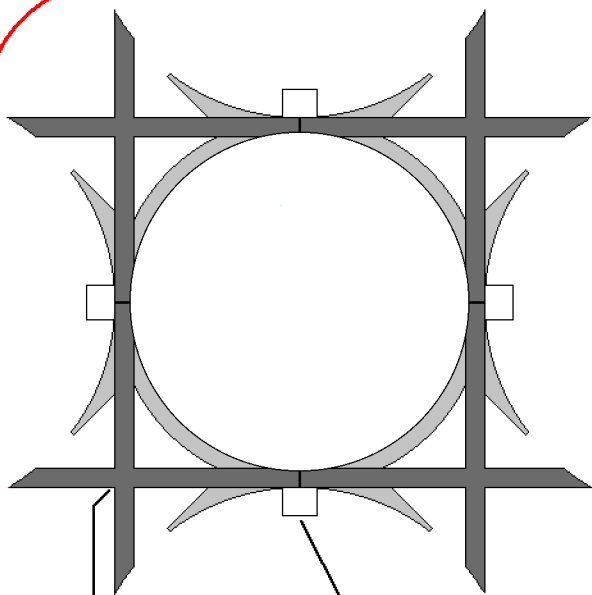
















lineup with seam of
lower fuselage

booster alignment
pin

glue to cardstock

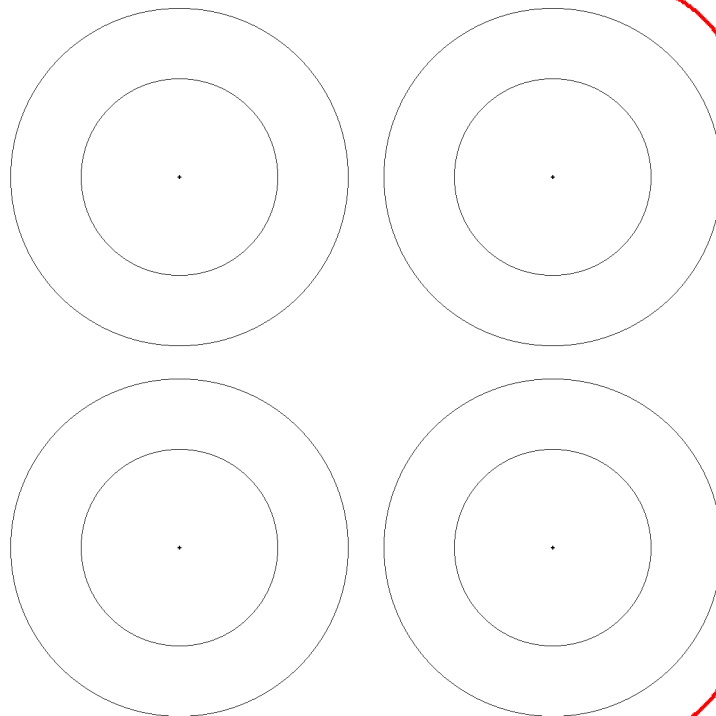

glue to cardstock

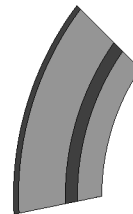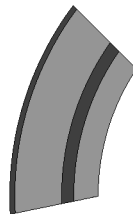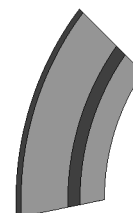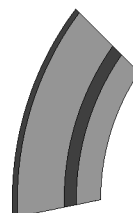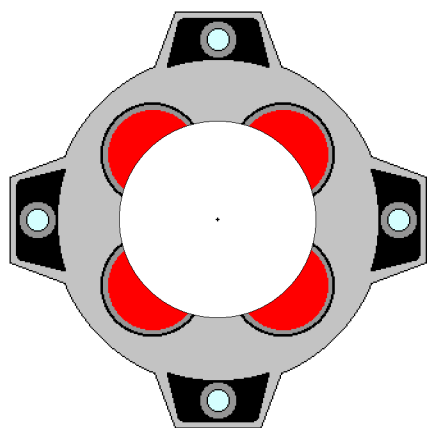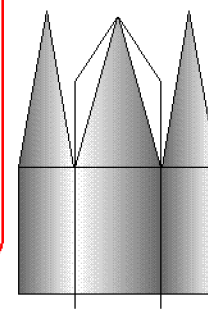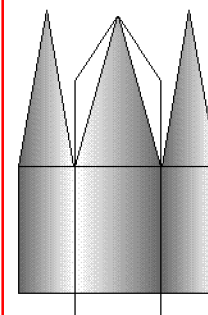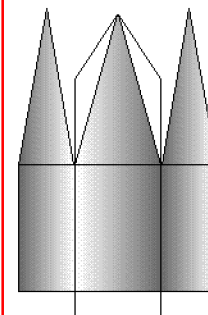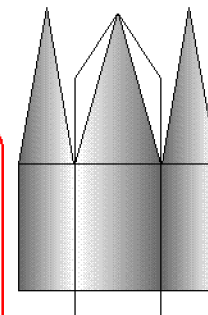

1 cm

1 inch

